

### GUARANTEE

PFK ELECTRONICS (PTY) LIMITED AND KNIGHTWATCH (UK) LIMITED WARRANTS THIS PRODUCT TO THE ORIGINAL CONSUMER PURCHASER TO BE FREE FROM DEFECTS IN WORKMANSHIP AND MATERIAL FOR A PERIOD OF TWO YEARS. SHOULD THIS PRODUCT BE FOUND TO BE DEFECTIVE IN THE VEHICLE IN WHICH IT WAS ORIGINALLY INSTALLED, PFK ELECTRONICS SHALL REPAIR OR REPLACE THE PRODUCT OR ANY PART OF THE PRODUCT WHICH PFK ELECTRONICS AGREES IS DEFECTIVE WITHOUT CHARGE. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT WHICH HAS BEEN DAMAGED BY ACCIDENT, PHYSICAL OR ELECTRICAL ABUSE, IMPROPER INSTALLATION, ANY USE CONTRARY TO ITS INTENDED FUNCTION, UNAUTHORISED SERVICE (I.E. SERVICE BY ANYONE OTHER THAN PFK ELECTRONICS OR ITS AUTHORISED AGENTS/SERVICE PERSONNEL), FIRE, FLOODING, LIGHTNING OR ACTS OF GOD.

### INDEMNITY

PFK ELECTRONICS (PTY) LIMITED AND KNIGHTWATCH (UK) LIMITED SHALL NOT BE RESPONSIBLE FOR ANY REMOVAL AND/OR INSTALLATION CHARGES, DAMAGE TO OR THE THEFT OF THE VEHICLE OR ITS CONTENTS, OR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ANY FAILURE OF THE PRODUCT TO FUNCTION PROPERLY. UNDER NO CIRCUMSTANCES SHOULD THIS WARRANTY, OR THE PRODUCT COVERED BY IT, BE CONSTRUED AS AN INSURANCE POLICY AGAINST LOSS. PFK ELECTRONICS NEITHER ASSUMES NOR AUTHORISES ANY PERSONS OR ORGANIZATION TO MAKE ANY WARRANTIES, NOR DOES IT ASSUME ANY LIABILITY IN CONNECTION WITH THE SAFE INSTALLATION, OR USE OF THIS PRODUCT. THIS IS THE COMPLETE PFK ELECTRONICS WARRANTY AND NO OTHER WARRANTY EXISTS.

DPFK 279-510

FRONT OF PAGE 2

The logo for AutoWatch, featuring the word "auto" in a lowercase, sans-serif font above the word "WATCH" in a larger, bold, uppercase, sans-serif font. The letters are white against a black background.

**ADVANCED VEHICLE  
SECURITY SYSTEMS**

**279 RLi  
ALARM IMMOBILISER**

**OWNER'S MANUAL**



**A QUALITY  
PRODUCT FROM  
AUTOWATCH**

FRONT OF PAGE 1

### UNLOCK WITH IGNITION (OPTIONAL)

Switch the ignition off.  The doors unlock.

*If selective unlock is configured, then only the driver's door will unlock.*

### EMERGENCY OVERRIDE (PIN CODE)

The alarm can be disarmed without the use of the remote, by entering the override PIN.

The siren/hooter will sound during this procedure.

Refer to the PIN attached to the key tag and enter each digit of the PIN individually as follows:

*(Note that a 0 is represented by 10 flashes)*

Switch the ignition on – the status light will illuminate.

Switch the ignition off – the status light will begin to flash.

After the number of flashes equivalent to the first digit of your code, switch the ignition on. – the status light will illuminate.

*This is the 1<sup>st</sup> digit entered. Switch the ignition off and counting the flashes enter the 2<sup>nd</sup>, 3<sup>rd</sup>, 4<sup>th</sup> and 5<sup>th</sup> digit of your PIN.*

After correct entry of all 5 digits – the alarm will disarm. The LED will turn on solid. Switch off ignition and wait 10 flashes – the status light will extinguish.


*It is important that the 5 digits are entered sequentially. If you make a mistake, wait until the flashes return to the alarm armed flashing sequence -3 flashes – pause – 3 flashes... Then begin again starting from the 1<sup>st</sup> digit of your PIN.*

*The PIN number is also required by your Autowatch dealer should you require additional remotes.*

FRONT OF PAGE 3

## INTRODUCTION

*Congratulations. Your vehicle is protected by an Autowatch vehicle security system designed to give years of trouble free operation, made with only the highest quality components and using state of the art technology you can be assured that your vehicle has the best electronic protection available.*

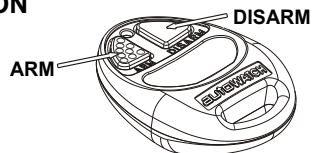

### ARMING OF THE ALARM

Press the Arm button momentarily.

- ➡ 1 arming tone and park lights flash once.
- ➡ The status light flashes armed sequence.
- ➡ 3 flashes – pause – 3 flashes...

*A "door open" warning tone can be programmed by your Autowatch dealer.*

### DISARMING OF THE ALARM

Press the Disarm button momentarily.

- ➡ 2 disarming tones and the park lights flash twice. The status light extinguishes.

*The "on" and "off" tones may be de-selected by your Autowatch dealer.*

### ANTI HIJACK IMMOBILISER (OPTIONAL)

Press the hidden cancel button after switching the ignition on, or opening the hijack door/s.

- ➡ The status light illuminates for 1 second to indicate that hijack has been cancelled.

*Failure to do so will result in warning tones, slowing down of the vehicle followed by immobilization and siren/hooter at full volume with park lights flashing, press the cancel button at any stage to exit.*

### HIJACK SERVICE MODE

*(Use this feature to avoid revealing the location of the cancel button)*

With the alarm disarmed, press and hold the hijack cancel button. While depressed, press the arm or disarm button on the remote. ➡ 2 tones will be heard indicating the hijack feature is disabled.

To re-select hijack, repeat the above procedure. ➡ 1 tone will be heard indicating the hijack feature is enabled.

### EARLY WARNING DETECTION (OPTIONAL)

If the vehicle is bumped.

- ➡ The siren/hooter will sound momentarily and the park lights will flash.

### EARLY WARNING ISOLATION

Press the Arm button a second time within one second after turning the alarm on.

- ➡ A tone is heard indicating the feature is deselected for this arm cycle.

### INTRUSION DETECTION

The Alarm will detect a significant impact to the vehicle, the ignition being switched on and doors, bonnet or trunk opening.

- ➡ The siren/hooter will sound and the hazards flash for 30 seconds, unless the remote is pressed.

*Each zone will trigger the alarm a maximum of 3 times per "on" cycle.*

Inside Pages 1

Inside Pages 2

### IMPACT SENSOR ISOLATION

Press the Arm button a third time within 1 second after isolating early warning..

- ➡ A tone is heard indicating the feature is deselected for this arm cycle.

### REMOTE PANIC

Press and hold the Arm or Disarm button on the remote for 3 seconds.

- ➡ The siren/hooter will sound and the hazards flash, unless the remote is pressed.

### CENTRAL LOCKING (OPTIONAL)

Turn the alarm on.

- ➡ The doors will lock.

Turn the alarm off.

- ➡ The doors will unlock.

With the ignition on, press the remote.

- ➡ The doors will lock/unlock.

### SELECTIVE UNLOCKING (OPTIONAL)

Turn the alarm off.

- ➡ The driver's door will unlock.

Press the Disarm button again.

- ➡ The passenger doors will unlock.

### LOCK WITH IGNITION (OPTIONAL)

Switch the ignition on with doors closed.

- ➡ The doors will lock.

Inside Pages 3