



***ADVANCED VEHICLE
SECURITY SYSTEMS***

**446RLi (AU) REMOTE
ALARM / IMMOBILISER**

OWNER'S MANUAL



**A QUALITY
PRODUCT FROM
AUTOWATCH**

CONGRATULATIONS!

Your vehicle is protected by an Autowatch vehicle security system designed to give years of trouble free operation, made with only the highest quality components and using state of the art technology you can be assured that your vehicle has the best electronic protection available.

ARMING THE ALARM AND IMMOBILISER

Press the remote button momentarily to arm the alarm and immobiliser.



The siren sounds once, and the hazards flash once. The status light flashes the armed sequence: 3 flashes - pause - 3 flashes...

A "door opened" while arming warning tone can be programmed by your Autowatch dealer.

DISARMING THE ALARM AND IMMOBILISER

Press the remote button to disarm the alarm and immobiliser.



The siren sounds twice, the hazards flash twice then illuminate for 15 seconds or until the ignition is switched on.

The status light extinguishes.

** The hazards illuminate for 15 seconds for convenient entry to the vehicle in the dark.*

** The "On" and "Off" tones can be de-selected by your Autowatch dealer.*

SELF ARMING IMMOBILISER

The immobiliser arms 45 sec's after switching the alarm off or switching the ignition off.



The status light flashes once per second.

DISARMING THE SELF ARMED IMMOBILISER

Switch the ignition on and press the remote button. (Or turn the alarm on and off again).



The status light will extinguish and the immobiliser will cancel.

ANTI HIJACK IMMOBILISER (OPTIONAL)

Press the hidden cancel button within 30 sec's or switching the ignition on, or opening the designated hijack door/s.



The status light illuminates for one second to indicate that hijack has been cancelled.

** Failure to do so will result in warning tones, thereafter a progressive slowing down of the vehicle followed by immobilisation and siren at full volume with hazards flashing. Press the cancel button at any stage to exit.*

HIJACK SERVICE MODE *(Use this feature to avoid revealing the location of the cancel button.)*

With the alarm and immobiliser disarmed press and hold the hijack cancel button. While this button is depressed, press the remote button.



The siren sounds twice to indicate the hijack feature has been disabled.

To re-select hijack, repeat the above procedure.



The siren sounds once to indicate the hijack feature has been enabled.

EARLY WARNING DETECTION (OPTIONAL)

Depending on the movement sensor and program installed, detection prior to intrusion is possible when the alarm is on.



The siren will sound momentarily at reduced volume and the hazards will flash each time movement is detected in close proximity (microwave sensor), or the vehicle is bumped (dual stage shock sensor).

EARLY WARNING ISOLATION

Press the remote button a second time within one second of turning the alarm on.



The siren sounds a warning tone and the feature is deselected for this arm cycle.

INTRUSION DETECTION

The alarm will detect the ignition being switched on and the doors, bonnet, or trunk opening. Additional sensor/s may have been installed to detect movement within the vehicle.



The siren will sound for 30 seconds and hazards flash, unless the alarm is turned off. Each zone will trigger the alarm a maximum of 3 times per "on" cycle.

MOVEMENT SENSOR ISOLATION

Press the remote button a second time within one second of turning the alarm on.



The siren sounds a warning tone, the feature is deselected for this arm cycle.

** If you have the early warning option programmed, the second press will isolate the early warning detection, and a third press will be required to isolate movement sensor.*

REMOTE PANIC

With the ignition off, press the remote button for an extended duration of 3 seconds.



The siren will sound and the hazards will flash for 30 seconds or until the remote is again pressed.

INTERIOR LIGHT (OPTIONAL)

Disarm the alarm by remote button or switch the ignition off.



The interior light will illuminate for two minutes or until the ignition or alarm is turned on.

CENTRAL LOCKING (OPTIONAL)

Turn the alarm on by pressing the remote button.



The doors will lock.

Turn the alarm off by pressing the remote button.



The doors will unlock.

** With the ignition on, pressing the remote button will alternately lock or unlock the doors.*

SELECTIVE UNLOCKING (OPTIONAL)

Turn the alarm off by pressing the remote button.



The drivers door will unlock.

Within one second again press the remote button.



The passenger doors will unlock.

LOCK WITH IGNITION (OPTIONAL)

Switch the ignition on.



Provided that the doors are closed, they will lock.

UNLOCK WITH IGNITION (OPTIONAL)

Switch the ignition off.



The doors will unlock. If the selective unlock option is configured, only the driver's door will unlock.

WINDOW CLOSING (OPTIONAL)

Turn the alarm on and continue holding the button until you hear the audible confirmation.



The alarm will arm as normal, and the windows will close.

** To stop the windows closing, disarm the alarm.*

EMERGENCY OVERRIDE (PIN CODE)

The alarm and immobiliser can be disarmed without the remote control by entering the override PIN. If the alarm was armed, the siren will sound during this procedure.

Refer to the PIN attached to the key tag and enter each digit of the PIN individually as follows: (Note that a zero is represented by 10 flashes).

Switch the ignition ON.



The status light will illuminate.

Switch the ignition OFF.



The status light will begin to flash.

After the number of flashes equivalent to the first digit of your code switch the ignition ON.



The status light will illuminate.

** This is the first digit entered. Switch the ignition off and counting the flashes enter the second, third, fourth and fifth digit of your PIN.*

After correct entry of the 5th digit.



The status light will flash rapidly.
The alarm and immobiliser will disarm.
The status light will extinguish.

** It is important that the 5 digits are entered sequentially. If you are confused or make a mistake wait at least 10 flashes, then begin again starting from the first digit of your PIN. The PIN number is also required by your fitment centre should you require additional remote controls.*

GUARANTEE

PFK ELECTRONICS (PTY) LIMITED AND KNIGHTWATCH (UK) LIMITED WARRANTS THIS PRODUCT TO THE ORIGINAL CONSUMER PURCHASER TO BE FREE FROM DEFECTS IN WORKMANSHIP AND MATERIAL FOR A PERIOD OF TWO YEARS. SHOULD THIS PRODUCT BE FOUND TO BE DEFECTIVE IN THE VEHICLE IT WAS ORIGINALLY INSTALLED, PFK ELECTRONICS SHALL REPAIR OR REPLACE THE PRODUCT OR ANY PART OF THE PRODUCT WHICH PFK ELECTRONICS AGREES IS DEFECTIVE WITHOUT CHARGE. THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT WHICH HAS BEEN DAMAGED BY ACCIDENT, PHYSICAL OR ELECTRICAL ABUSE, IMPROPER INSTALLATION, ANY USE CONTRARY TO ITS INTENDED FUNCTION, UNAUTHORISED SERVICE (I.E. SERVICE BY ANYONE OTHER THAN PFK ELECTRONICS OR ITS AUTHORISED AGENTS/SERVICE PERSONNEL), FIRE, FLOODING, LIGHTNING OR ACTS OF GOD.

INDEMNITY

PFK ELECTRONICS (PTY) LIMITED AND KNIGHTWATCH (UK) LIMITED SHALL NOT BE RESPONSIBLE FOR ANY REMOVAL AND/OR INSTALLATION CHARGES, DAMAGES TO OR THE THEFT OF THE VEHICLE OR ITS CONTENTS, OR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ANY FAILURE OF THE PRODUCT TO FUNCTION PROPERLY. UNDER NO CIRCUMSTANCES SHOULD THIS WARRANTY, OR THE PRODUCT COVERED BY IT, BE CONSTRUED AS AN INSURANCE POLICY AGAINST LOSS. PFK ELECTRONICS NEITHER ASSUMES NOR AUTHORISES ANY PERSONS OR ORGANIZATION TO MAKE ANY WARRANTIES, NOR DOES IT ASSUME ANY LIABILITY IN CONNECTION WITH THE SAFE INSTALLATION, OR USE OF THIS PRODUCT. THIS IS THE COMPLETE PFK ELECTRONICS WARRANTY AND NO OTHER WARRANTY EXISTS.

ADVANCED VEHICLE SECURITY SYSTEMS

DPFK 446512

Tugela Press 175-168

The logo for 'Auto Watch' is presented in a stylized, bold, black font. The word 'auto' is positioned above 'WATCH'. The letters are thick and blocky, with some internal cutouts, particularly in the 'o' and 'A'. The entire logo is set against a solid black rectangular background.

**auto
WATCH**