

#### GUARANTEE

PFK ELECTRONICS (PT) LTD GUARANTEES THE UNIT FOR A PERIOD OF 1 YEAR. FAILURE DUE TO INCORRECT INSTALLATION, FAULTY CONNECTIONS OR ACCIDENTS, OR DAMAGES TO EITHER VEHICLE OR THE UNIT IS NOT COVERED BY THE GUARANTEE. THE GUARANTEE IS LIMITED TO THE REPLACEMENT OF FAULTY PARTS OR COMPONENTS IN THE REPAIR OF THE UNIT - THE GUARANTEE BECOMES NULL AND VOID IF THE UNIT HAS BEEN TAMPERED WITH, REPAIRED OR DAMAGED BY ANY UNAUTHORISED PERSONS.

#### INDEMNITY

PFK ELECTRONICS (PTY) LTD INDEMNIFIES ITSELF AGAINST ANY CLAIMS OR DAMAGES ARISING DIRECTLY OR INDIRECTLY FROM THE USE OF ANY OF ITS IMMOBILISER DEVICES AND/OR FAILURE ALBEIT DUE TO DESIGN, MANUFACTURE, QUALITY, COMPONENTS, RECOMMENDED INSTALLATION TECHNIQUES AND/OR ANY CONSEQUENTIAL CLAIMS BY THIRD PARTY, ACCIDENT, FIRE, THEFT, INSURANCE OR VEHICLE MANUFACTURERS GUARANTEES OR FOR ANY REASON WHATSOEVER THAT MAY ARISE FROM THE USE OR INSTALLATION OF ITS PRODUCTS.

#### INSTALLATION CENTRE:

#### INTRODUCTION

Congratulations! Your vehicle is protected by a proximity immobiliser system which has been designed with only the very best components to ensure maximum reliability. Using state of the art Tirus Transponder technology it offers the ultimate in user convenience. Refer to the operating instructions below to fully understand the operation of the system.

#### IMPORTANT NOTICE

On the back of the Owner's Manual is a 5 digit emergency override code number. This is the "Identity Document" of your immobiliser. **DO NOT LOOSE IT - at the very least make sure that you record the number as it can be used to disarm the immobiliser in the event of a malfunction.** This number is also required when ordering additional Transponders.

#### OPERATION

##### ARMING THE IMMOBILISER.

Protection to your vehicle is automatic. Simply switch the ignition off as normal -

the immobiliser. Wait for approximately 30 seconds before arming automatically. As an indication that the immobiliser is armed and as a deterrent to thieves, the red light (LED) flashes.

#### **DISARMING THE IMMOBILISER**

No action on the part of the driver is necessary to disarm the immobiliser! Attached to your key-ring is a small plastic housing containing the miniature Transponder programmed to deactivate your immobiliser. As you move the key towards the ignition switch to start the vehicle, the immobiliser control module interrogates the Transponder and verifies that it has the correct code to disarm the immobiliser. Once this has been successfully completed, the red light will extinguish and the vehicle can be started. All this takes place almost instantaneously and it is unlikely that you would even perceive that you have an immobiliser installed.

#### **EMERGENCY DISARM PROCEDURE**

Entering the number on the "Service and Override Card", will disarm the immobiliser

in the event of you losing Transponder or in the event of a malfunction.

#### **ENTERING THE EMERGENCY OVERRIDE NUMBER**

Refer to the 5 digit number on the card. Each digit is entered individually using the ignition switch. As a comprehensive guide of how to enter the number, the following example shows how the override code number "46032" would be used.

1. While the light is flashing (because the immobiliser is armed), turn the ignition ON. The light will turn steady ON.
2. Turn the ignition OFF, and the light will start flashing. Count the number of flashes. After the 4th flash, turn the ignition on. The light will be steady on again. (This is the first digit entered).
3. Turn the ignition OFF, and count the flashes. After the 6th flash, turn the ignition ON. The light will be steady on again. (This is the second digit entered).
4. Turn the ignition OFF, and count the flashes. After the 10th flash, turn the ignition ON. The light will be steady on

- again. (This is the third digit entered).
5. Turn the ignition OFF, and count the flashes. After the 3rd flash, turn the ignition ON. The light will be steady on again. (This is the fourth digit entered).
  6. Turn the ignition OFF, and count the flashes. After the 2nd flash, turn the ignition ON. The light will flash rapidly to indicate that you have successfully entered the code and the immobiliser will disarm and you will now be able to start the vehicle.

#### **ADDITIONAL TRANSPONDERS**

Additional Transponders (with a maximum of 8) can be programmed to disarm your immobiliser system and are available from your dealer. The code of your immobiliser (on the back page of your Owner's Manual) is required to program these Transponders.

**BE SURE TO HAVE THIS NUMBER AVAILABLE WHEN REQUESTING ASSISTANCE.**

